

Where to Locate The Series 96

Where you will locate the Series 96 depends on what other water treatment equipment you currently have installed. The Series 96 should be located:

After:	Before:
Water Meter	Water Heater
Pressure Tank	

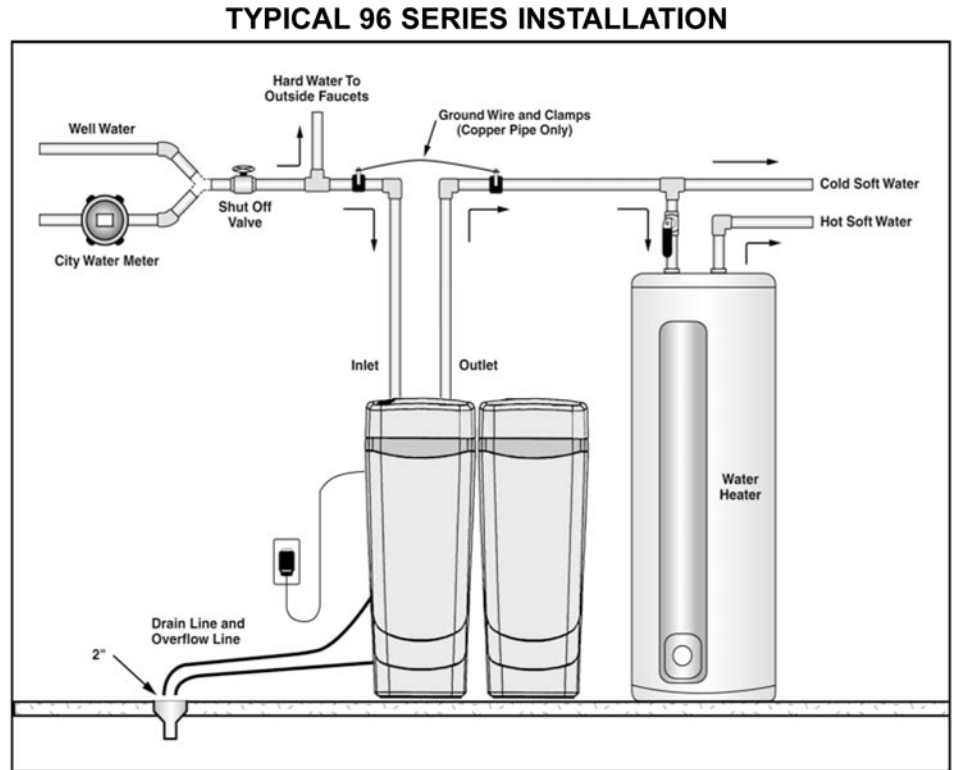


Figure 1

Keep in mind that you need to have a drain available nearby for waste water.

In placing the Series 96, consider the following:

- Install the Series 96 ahead of the water heater to prevent build-up of hard water deposits in the water heater. This placement will maintain the water heater efficiency.
- Install pressure reducing valve if inlet pressure exceeds 90 psi (620 kPa).
- A minimum of 10 feet (3 m) of 3/4" (19 mm) pipe from the outlet of the water conditioner to the inlet of the hot water heater is recommended to reduce the potential for hot water back flowing into the valve.